


变频	启动	故障	复位	变频	运行	变频	故障
----	----	----	----	----	----	----	----

ABB变频器端子	1	SCR	9
	2	AI1+	
	3	AGND	
	4	10V	
	5	AGND	DFQ-9
	6	AI2	DFQ-10
	7	AD1	DFQ-5
	8	AD2	
	9	AGND	DFQ-4

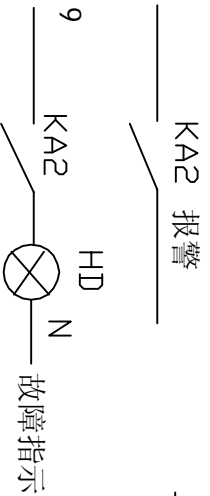

DFQ手操器		15	DCS
DI	1	16	
AI	2	17	
	3	18	
AI	4	19	
	5	20	
	6	21	
	7	22	
	8	23	
AD	9	24	
AD	10	25	
AD	11	26	
	12	27	
	13	28	
	14		

—拖二变频器端子图